

bentgo® kidschill

User's Manual



Thank you for purchasing Bentgo Kids Chill! This leak-proof lunch-packing system is designed exclusively for children ages 3-7. It offers 4 different compartments, all perfectly sized for a child's appetite, plus an optional ice pack to keep food cool longer. It's the perfect solution for packing a healthy, balanced lunch for school, a picnic, or any fun family outing.

Features

- 4 leak-proof compartments
- Dishwasher and microwave safe food tray
- Freezer safe lunch box with removable ice pack
- Rubberized edges for maximum durability
- Food-grade safe and eco-friendly materials
- No BPA, PVC, phthalates, lead, or vinyl

Using Your Bentgo Kids Chill

1. Lift the locking clip on the front of the lunch box to open.
2. Remove the food tray and ice pack.
3. Place the ice pack in the freezer until ready to use.
4. Fill the food tray with your child's favorite foods. Do not overfill.
5. To store overnight, place the food tray inside the outer box and put in the refrigerator until you're ready to travel.
6. When it's time to go, add the frozen ice pack to the outer box, nesting it below the food tray.
7. Close the lid and secure the locking clip.

NOTE: On days when it's not necessary to keep food cool, Bentgo Kids Chill can still be used as a leak-proof lunch box without the ice pack.

Special Use & Care Instructions

- Wash before initial use.
- Food tray is top-shelf dishwasher safe.
- Removable ice pack and outer box should be hand washed as needed.
- Thoroughly dry all pieces before storing.
- Store the lunch box open, not sealed or closed.

NOTE: Condensation, or sweating, occurs naturally with all ice packs and is normal when using the ice pack with this lunch box.

Warnings

- Microwaving the tray is for reheating only — Do not microwave for more than 3 minutes.
- To ensure mess-free opening and closing of your Bentgo Kids Chill, do not overfill compartments.
- The lunch box lid is not designed to lay flat. Do not push the lid backwards to lay it flat on a table or other surface. The hinges may snap if too much pressure is applied.
- To preserve the leak-proof seal on the lid, do not place the outer box in the dishwasher.

Product Warranty

Bentgo offers an industry-leading 2 Year Warranty. If you have warranty or product questions, please contact us directly at:

Email: support@bentgo.com

Phone: (657) 275-3738

(Available Monday-Friday, 8am-5pm PST)

Specifications

| | |
|-----------------------|--|
| Container Dimensions | 8.9" x 6.5" x 2" |
| Tray Capacity | Left Compartment: 1 1/3 cup Back Compartment: 1 cup Small Compartments: 1/2 cup each |
| Product Weight | 1 lb. 8 oz. |
| Temperature Threshold | 0° to 180° F |

Materials*

| | |
|------------------------------|--------------------------|
| Outside Shell & Locking Clip | ABS Plastic |
| Rubberized Overlay | TPE Thermoplastic Rubber |
| Food Tray | PP Plastic |
| Ice Pack | ABS Plastic |

*All materials are food-grade safe and eco-friendly

bentgo®

Santa Ana, CA 92704
bentgo.com

REV: 03-2022